

OUTSIDE MOUNTED BAILERS

RA 574154 Large

RA 574153 Mini

1. Remove the bailer handle first, by pulling both sides of the wire handle from the black roller simultaneously **(1.1)**.
2. Push bailer chute through the hull and remove completely.
3. Remove the existing gasket and any salt or moisture from the bailer and surrounding area **(3.1)**. Remove any remaining adhesive with appropriate solvent.
4. Install the new Gasket by removing backing paper, carefully positioning with adhesive side against the bailer and pressing firmly into the recessed area.
5. Reinstall the bailer chute by putting the forward tab in first (before inserting the rest of the chute) **(5.1)**. Push the chute body back into the hull. Replace the roller and wire handle after replacing the chute. Compress the wire handle with multi-grips where shown **(5.2)**, so that the sections of wire handle that locate against the chute housing plates rest inside the raised location ribs, when the bailer is locked closed **(5.3)**. Lubricate the handle, chute and door as required.

Bailer Service Kit Installation

Outside Mounted Bailers

